

Fitting Instructions – ALRCE LATCH

ALRCE RADIUS TUBULAR LATCH

Date Modified: 02/05/2022

Last modified by: Brock H

For best results when fixing an ALCE Latch follow these instructions.

Atlantic recommends this product is fitted by a joiner.

Before beginning installation, check the product is as required/ordered.

- 1) Separate out all components supplied as follows:
 - X1 Latch
 - X1 Face Plate
 - X1 Strike Plate
 - X1 Dust Box
 - X4 screws
- 2) First, mark out the desired position for the latch on the door.
- 3) Next, router out a hole for the latch to sit in using an appropriately sized cutter for the face plate (including a space for the faceplate) and create a hole through the door for the spindle.
- 4) Insert the latch into the pre-routed hole (ensuring that the beveled edge of the latch tongue is facing toward the frame rebate), insert the faceplate onto the latch using 2 of the screws provided to secure the door.
- 5) Now, mark out the position of the latch tongue on the frame.
- 6) Offer the strike plate over the marked position and draw around the outline.
- 7) Next, cut out that marked area using the appropriate router bit (allowing space for the dust box to sit) in the door.
- 8) Insert the dust box and strike plate and secure it with the remaining 2 screws provided.
- 9) To adjust accuracy, use a flat head screwdriver to bend the tongue on the inside of the strike plate to allow for a tighter grasp.